


# WK16-ZEP Shield in-line cable socket assembling instruction-Solder


## 1.Finished product




## 2.Disassemble the connector.

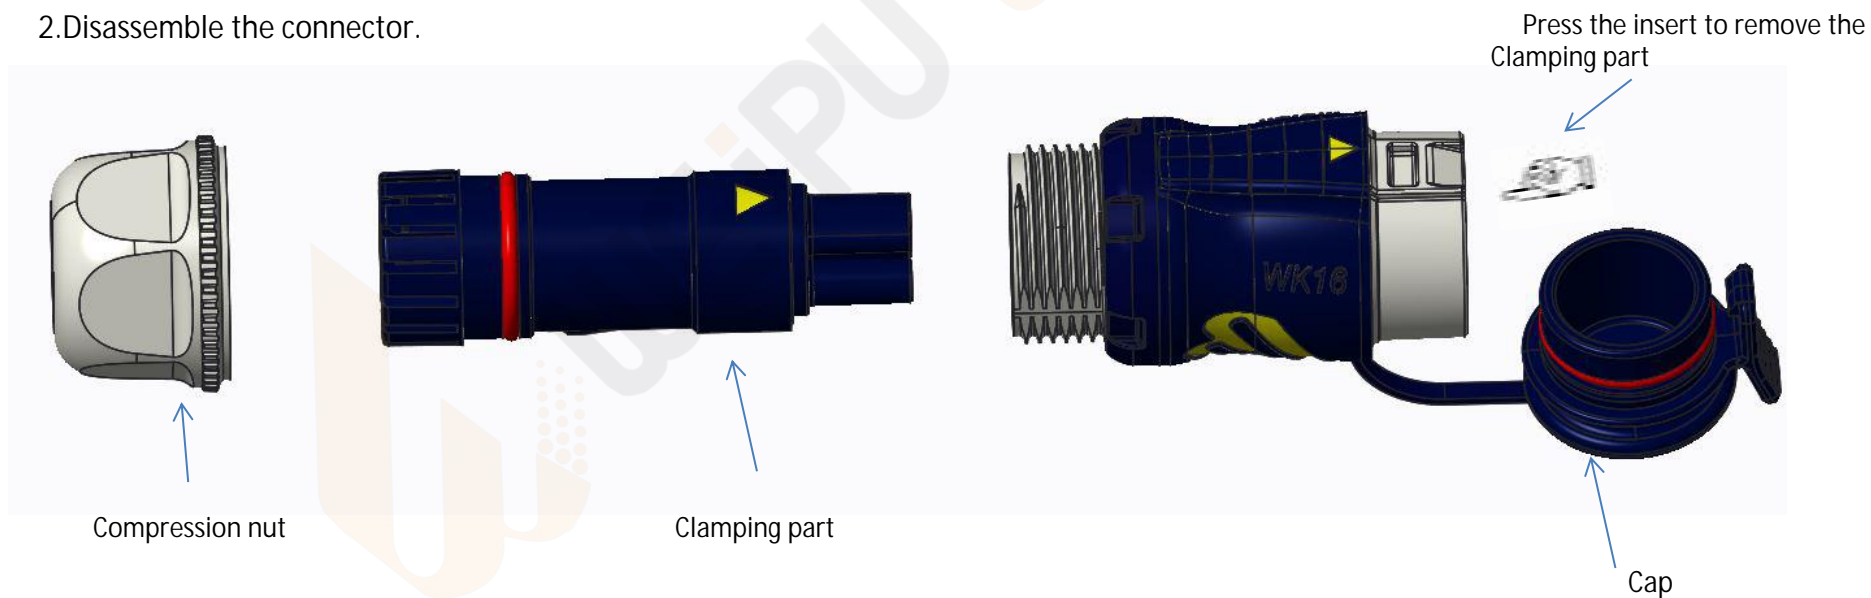


3、Strip length

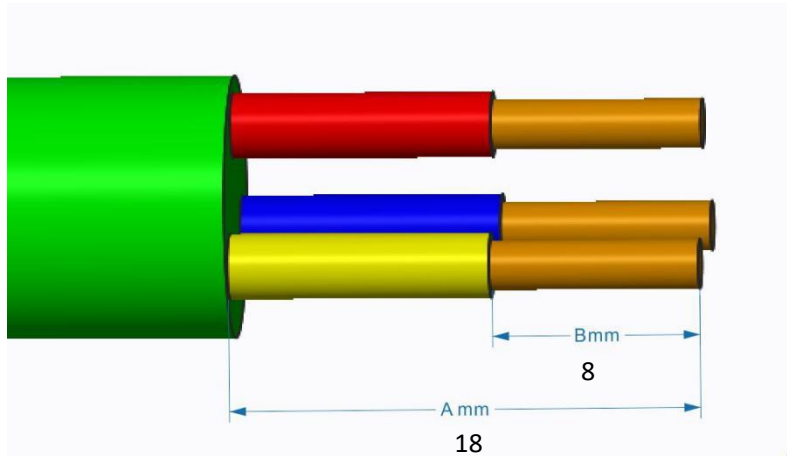


4、 Put the cable through compression nut and clamping part.

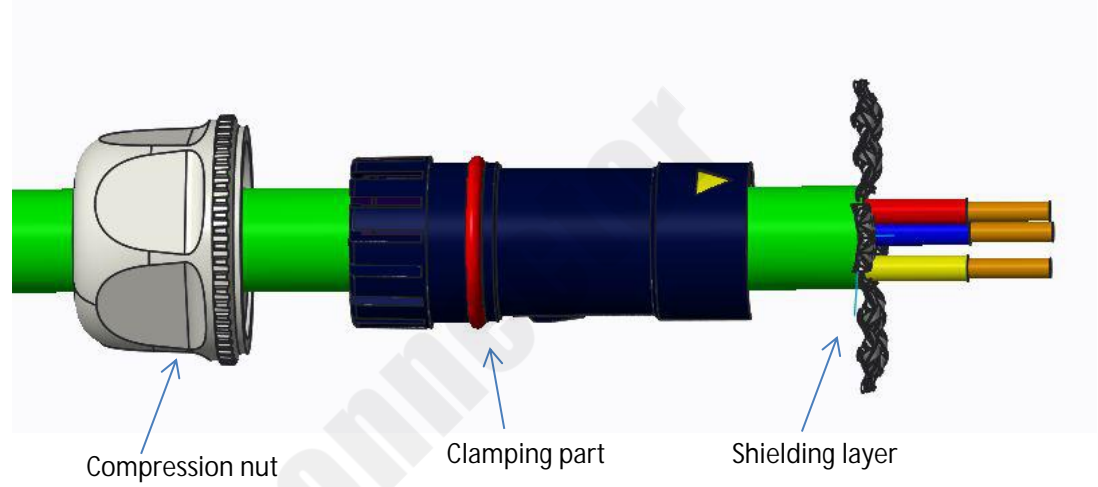


5、 Put the HS tube on wire

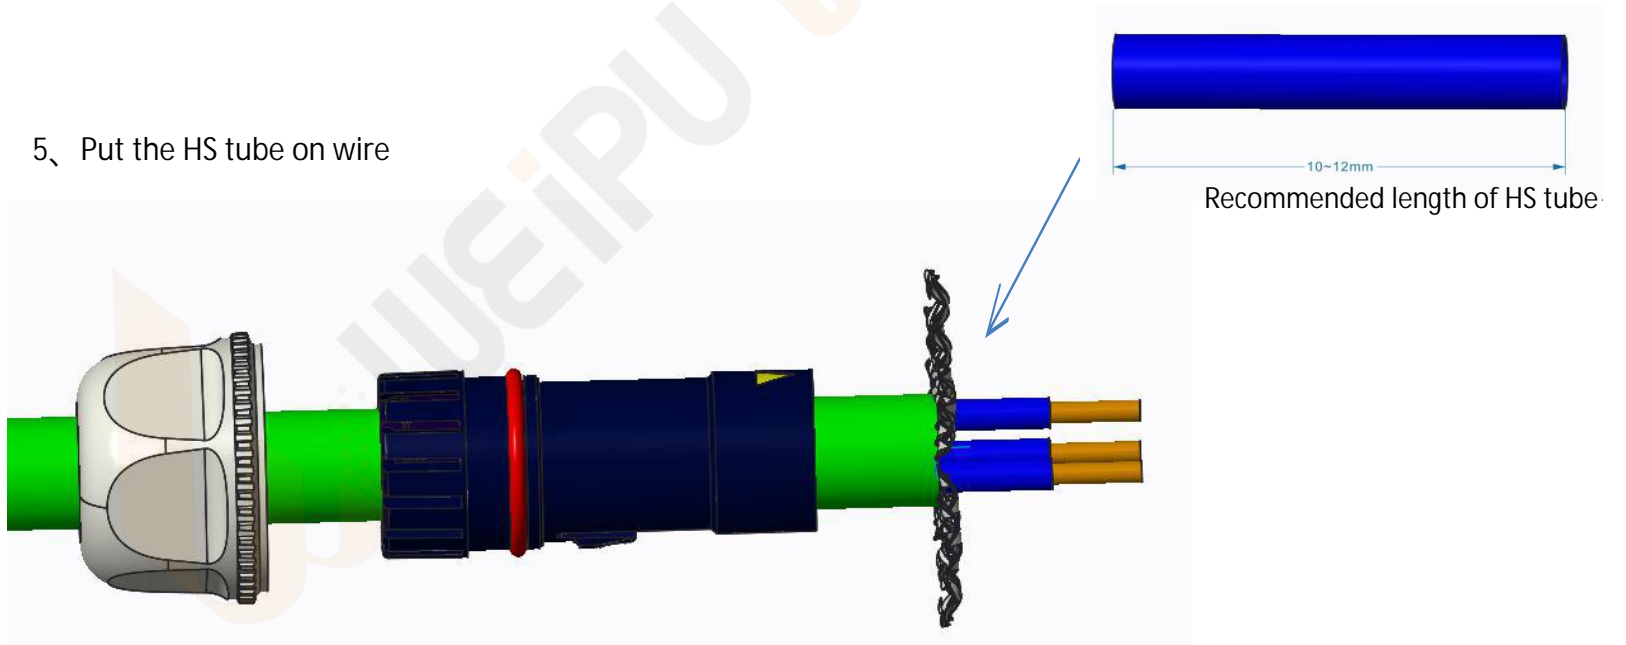

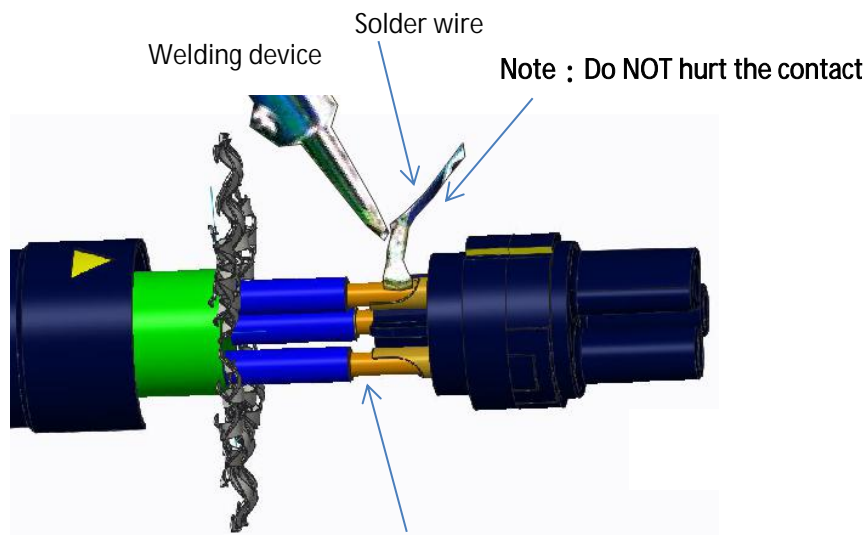


6、 Solder the wire to the contact and wrap with HS tube after soldering.

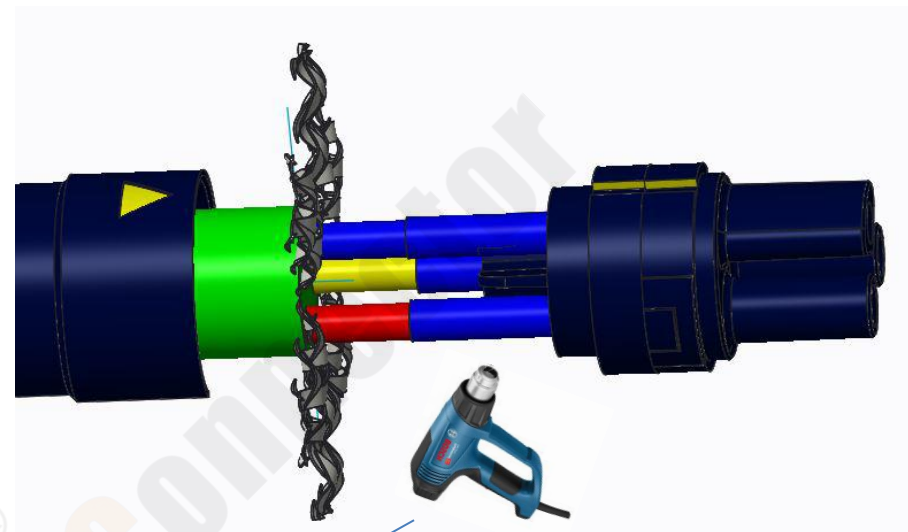


7、 Wrap the HS tube tightly by using hot air gun.


8、 Align the arrow and insert rib as below.

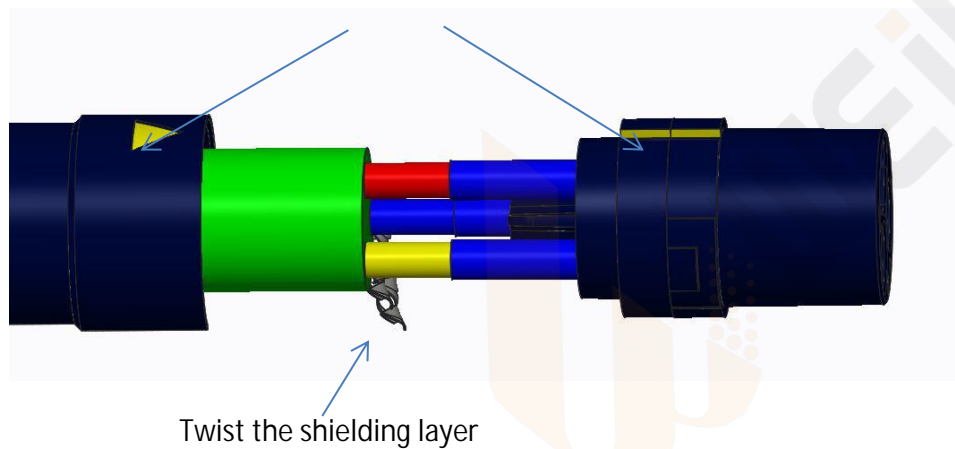

9、 Check alignment

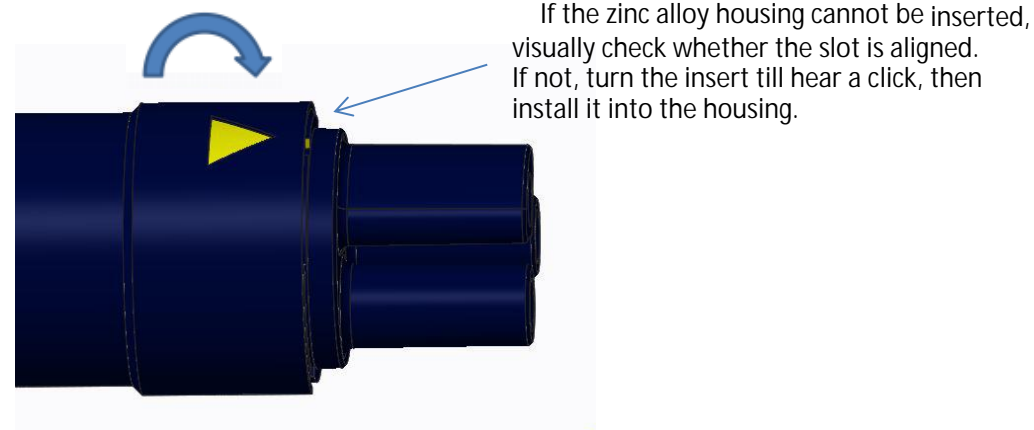

10、 Align the arrows at both ends according to the diagram and assemble them together

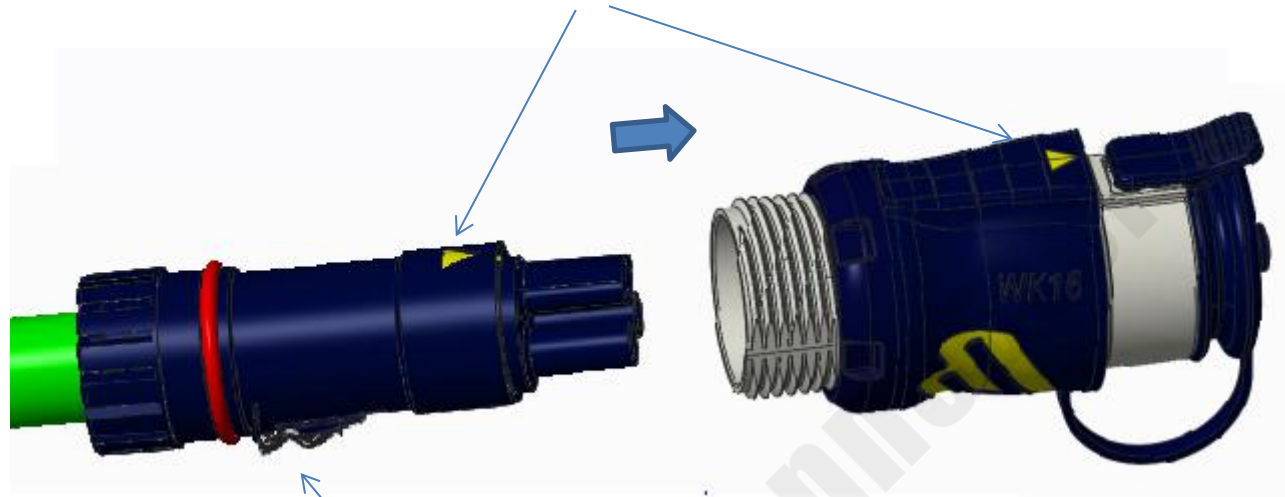

Note: Put the twisted shielding layer through the hole and flatten it for easy insertion.

11、 Use a torque wrench to tighten the Compression nut, with torque 2.5 N.m

