




WK20-Z Square flange socket assembling instruction-Solder

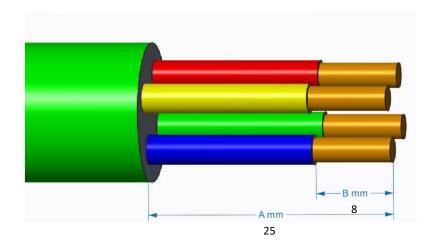



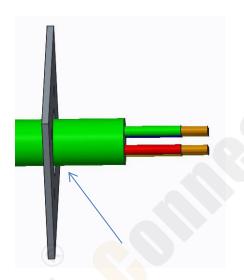


2. Put the cable/wire throught the panel.

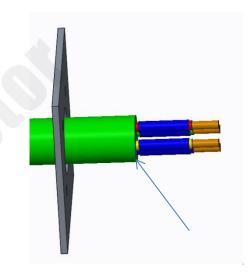


3. Put the HS tube on wire.






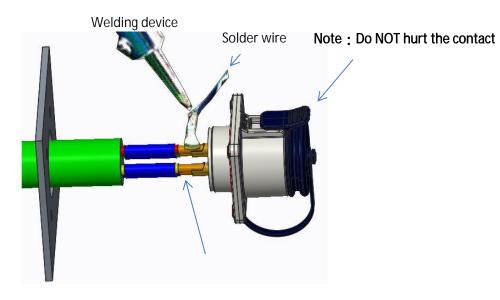

5. Solder the wire to the contact and wrap with HS tube after soldering.





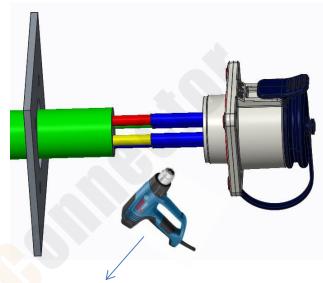

6. Wrap the HS tube tightly by using hot air gun.